


## Quick Guide | Operating valves on the Clearflow pump range

### KEY

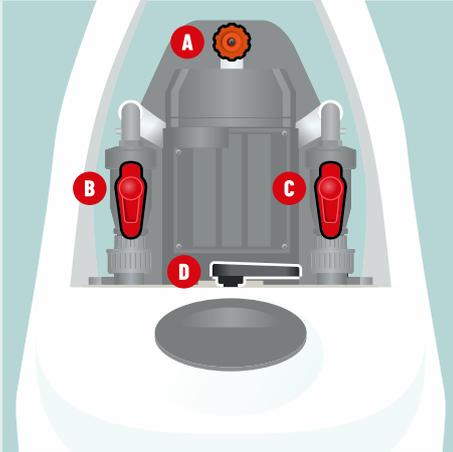

- A** WATER INLET VALVE
- B** ISOLATING VALVE 1
- C** ISOLATING VALVE 2
- D** FLOW REVERSER LEVER

### CLOSED POSITION



The closed isolating valves position is used when initially setting up the pump, after finishing the flush or if the pump is turned off for any reason.

### NORMAL CIRCULATION


Flow reverser lever may be set in either position.




During normal circulation of water through the system during a power flush, both ISOLATING VALVES 1 & 2 should be pointing downward.

### DISCHARGING (DUMPING)

During discharging/dumping, the flow can be in either direction:

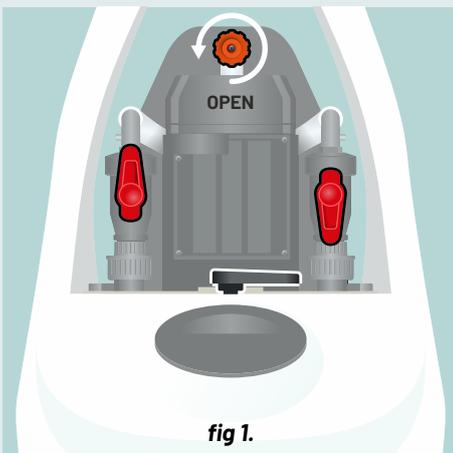

FLOW DIRECTION TO THE RIGHT: VALVE 1 only is rotated into dumping position and FLOW REVERSER LEVER is set to the right. (fig 1.)

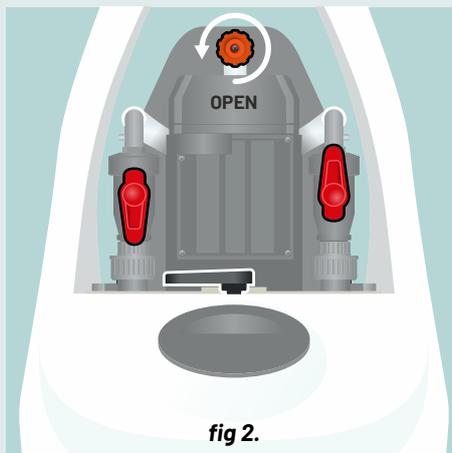

FLOW DIRECTION TO THE LEFT: VALVE 2 only is rotated into dumping position and FLOW REVERSER LEVER is set to the left (fig 2)

### DO NOT

set both ISOLATING VALVES in the up position as this will obstruct water flow into the system.



During discharging/dumping, only one ISOLATING VALVE should be rotated into dumping position. NEVER BOTH VALVES.